



**M7** **1080P**  
Native Full HD  
Mini LED Projector



**User Guide**

# Caution!

**WARNING:** Please use this product as instructed. Misuse may cause injury or death.

DO NOT use while driving

DO NOT expose to water or wet surfaces. Electric shock may occur

DO NOT expose the projected LED image to your eyes or the eyes of others

DO NOT block or restrict airflow from ventilation holes as this may cause the projector to overheat

Keep the projector, battery, or charger away from any heat sources

## Caution for Battery Use

- Do not pierce or puncture the battery with sharp objects
- Do not heat the product or expose it to high temperature.
- Do not wet it or place it in any liquid

## Caution for Headphone Use

- Prolonged use at high volume may impair your hearing.
- High volume during walking or driving may cause distractions and result in injury or death

# Table of Contents

## Chapter 1: M7 at a Glance

M7 Introduction	1
Remote & Keypad	2
Accessories	3

## Chapter 2: Getting Started

Powering On / Off	4
Focus Adjustment / Throw	
Distance	5
Connecting to Speaker or Headphones	6
Loading External Content	7

## Chapter 3: Menu Screens

Main Menu	10
Brightness Menu	11
Video Player Menu	12
Photo Menu	16

Connecting to Device via Digital AV	20
Connecting to Device via USBC	23
Connecting to Composite Video	25
Music Player Menu	27
Ebook Viewer	30

## Chapter 4: Settings Menu

Picture Settings	32
Sound Settings	33
Option Settings	34

## Chapter 5: Technical Details

Powerbank Mode	35
Keystone Adjustment	37
Troubleshooting	39
Specifications	43
Notes	44

# M7 at a Glance

# Chapter 1

## Main Unit Front/Back

Focus Adjustment

Headphone Out

Composite AV Port

USB-C Compatible Port

DC Port

Digital AV Port

Control Keypad

Dual Speakers

USB Port



 
TF Card

Cooling Fan

Power Switch & Powerbank Mode



# Remote & Keypad

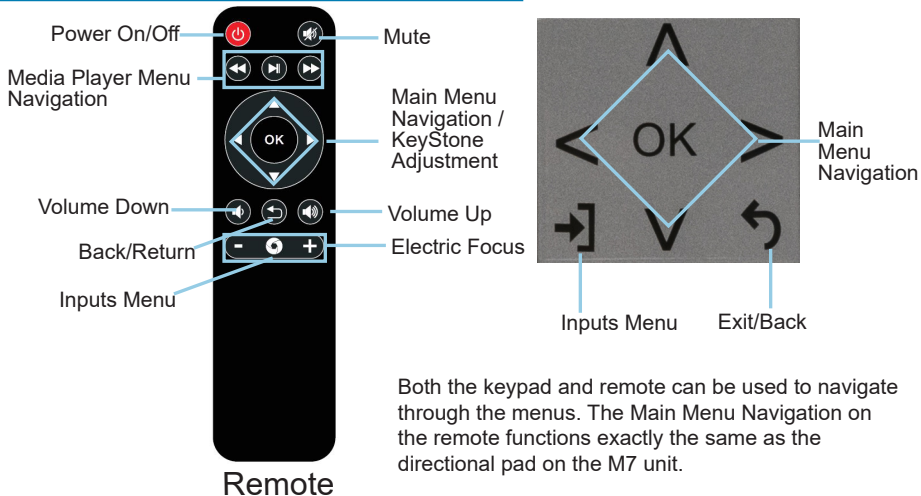


Both the keypad and remote can be used to navigate through the menus. The Main Menu Navigation on the remote functions exactly the same as the directional pad on the M7 unit.

*NOTE: Pressing power on the remote will only put the projector in STANDBY mode. Toggle the "ON/OFF" switch on the side of the projector to fully turn the projector off.*


# Accessories



 Remote



A/V Cable

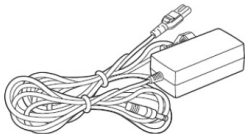 

Power Adapter




Ceiling Mount Kit  
(Sold Separately)


*\*Under various circumstances, the actual accessories may be different from those shown in the pictures above.*

*Additional accessories are available for purchase at [www.aaxatech.com](http://www.aaxatech.com)*

## Powering ON the projector

1. Connect the power cord to the M7.
2. Connect the other end of the power cord into the wall power source.
3. Toggle the On / Off switch on the side of the projector to the “ON” position - the projector should automatically turn on.
4. If the projector does not automatically turn on with the “Power Switch” toggled to the “ON” position, press the “ON/OFF POWER”  button on the remote to start the projector.

## Standby Mode

1. To transition to “STANDBY” mode, press the power button  on the remote control.
2. The optical engine should power off and the fan should stop spinning. A red LED light is on indicating that the projector is in Standby Mode. The projector is now in “STANDBY” mode and can be turned on using the remote control.

**\*Note: Standby mode will still consume a small amount of power.**

## Powering OFF the projector

1. To turn off the projector, toggle the “Power Switch” to the “OFF” position. This will fully turn off the projector.

# Focus Adjustment / Throw Distance

 
## Focus Adjustment

- To adjust focus of the projector, press the + or - buttons on the remote or use the focus buttons on the side of the projector.



## Throw Distance Chart

Throw Distance Units: Inches	Diagonal Size Units: Inches
20	19
30	29
40	38
50	48
60	57
70	67
80	76
90	86

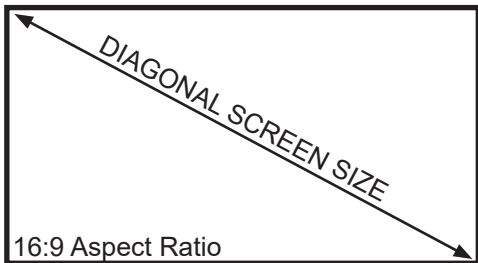

Throw Ratio 1.20

Projection Angle: 100% Offset

\*minimum throw distance: 6 inches



# Connecting Speakers / Headphones



**Step 1:** Connect your speakers/headphones to the projector's audio port.

**Step 2:** Ensure that the projector and/or the headphones are powered on.

 
**Step 3:** Place the headphones on and enjoy!

**\*CAUTION:** Prolonged use of headphones at a high volume may impair hearing.

# Loading External Content

The M7 can read files directly from both a TF Card and USB Drive.

Supported file types include:  
MP3 / WMA / OGG / WAV  
AVI / JPG / GIF/ BMP

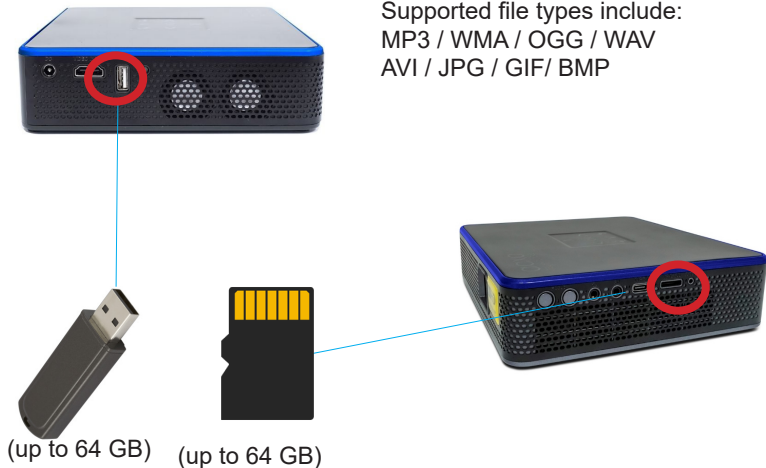

# Loading External Content Cont.

## How to insert your USB Drive

 
- Slide your USB Drive into the USB port.
- Gently slide the drive until it cannot go in any further.



(up to 64 GB)

## How to insert your TF Card


- Slide in your TF card into the TF card slot on the side of the M7 (as shown in picture).
- Gently slide the TF card until it clicks into place.

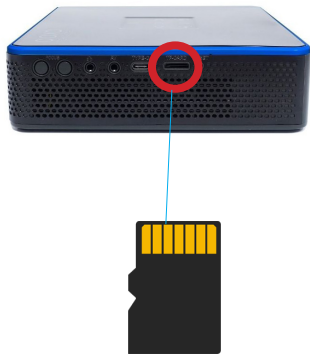

(up to 64 GB)

# Loading External Content Cont.

 Once your TF Card or USB Drive is inserted into the projector, the TF Card or USB Drive Storage will be loaded automatically and the content can be found through the **Photos**, **Videos** and **Music** icons located on the Main Menu, depending on the file type you wish to play. Loaded content can also be found through the **Text** icon, located within the Settings Menu.

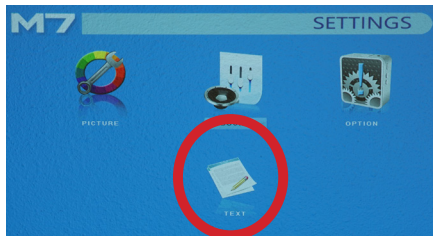


# Menu Screens

## Chapter 3

### Main Menu

 The M7 features a built in PMP (Portable Media Player) function. This function allows the projector to play videos, pictures, music files, and text directly from your connected devices.

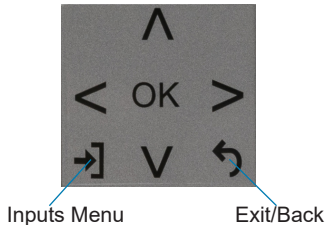

- Press the left and right directional buttons to choose an icon from the main menu.
- To select a menu option, press the “OK” button in the middle of the navigation pad.
- To go back to the previous screen, press the “Back” button.
- To return to the main menu, press the “Return” button twice.

# Brightness Menu

To change the brightness on your M7:

- Select the “Brightness” icon (Fig. 3.1)
- Select the brightness you wish (Fig. 3.2)
- Choose among Eco, Standard and Boost
- NOTE: Only Eco and Standard Mode are available when using off battery



Fig. 3.1



Fig. 3.2

# Video Player Menu

## Opening a file:

- Select the “Video” icon (Fig. 3.1).
- From the submenu (Fig. 3.2), select the storage media with the stored files.
- Choose which file you wish to play.

Fig. 3.3



Fig. 3.4



 
The M7 will show all folders and supported videos files you have on your USB or TF drive.

# Video Player Menu

## While Playing Videos

While playing videos, the volume is adjustable. Further controls are available in the video player submenu - which is accessed through the “OK” button.

\*Review Specification section of this manual for supported video formats.

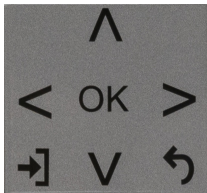

Volume Down



Volume Up



Positive Keystone Adjustment



Negative Keystone Adjustment



## Enter Video Player Submenu

- To open/hide the video playback menu, use the “OK” or “Down” Buttons on the projector or remote

On the remote, the “Up” and “Down” arrow buttons also control the keystone adjustment. The volume control on the remote is done through the “Volume Up” and “Volume Down” buttons only.



# Video Player Submenu

## Playing Videos

The Video Player Submenu can be accessed by pressing “OK” during video playback. To exit the Video Player Submenu, press the “Back” button. To navigate the Playback Menu, use the directional buttons on the navigation pad or remote to highlight the option you wish to choose ( see fig. 3.5) .

- To open/hide the video playback menu, use the “OK” and “Back” buttons on the projector.


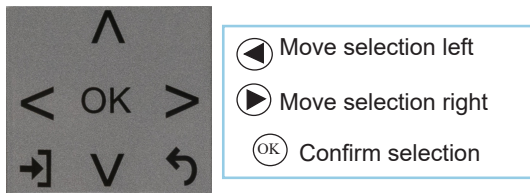 


Fig. 3.5

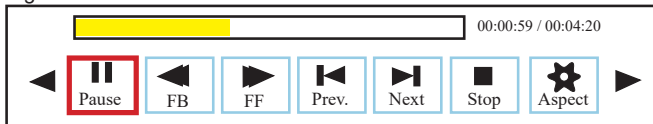 

# Video Playback FAQ

## How do I loop a video?

1. Choose either USB or TF Card for playback



2. Navigate the folders until you reach the file you wish to play.
3. Highlight the file you want to play, then confirm the selection.
4. Move selection on video player menu to “Repeat 1”, and confirm the selection.
5. The video will now loop after playback is finished.

# Photo Menu

## Opening A File:

- Select the “Photo” icon (Fig. 3.4).
- From the submenu (Fig. 3.5), select the storage media with the stored files.
- Choose which file you wish to play.

Fig. 3.4

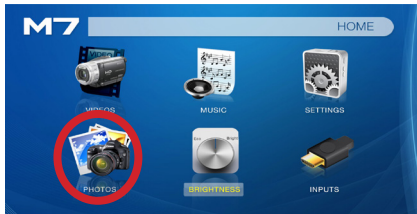 


Fig. 3.5




The M7 will show all folders and supported image files you have on your USB or TF Card drive.

# Photo Menu
 
## While Viewing Pictures

While viewing pictures, further controls are available in the Photo Submenu - which is accessed through the “OK” button. Keystone adjustment is also available.

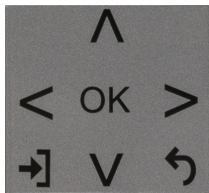

 Previous Picture

 Next Picture

 Positive Keystone Adjustment

 Negative Keystone Adjustment

## Enter Photo Player Submenu

- To open/hide the Photo Playback menu, use the “OK” and “Back” Buttons on the projector.

# Photo Submenu

## Viewing Pictures:

The Photo Submenu can be accessed by pressing “OK” during picture slide-show playback. To exit the Photo Submenu, press the “Back” button or wait 5 seconds. To navigate the playback menu, use the directional buttons on the navigation pad or remote to highlight the option you wish to choose (Fig 3.6).

\*Review Specification section of this manual for supported picture formats.

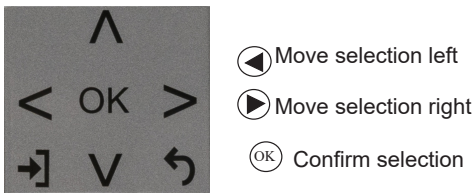 


Fig 3.8



# Photo Slideshow FAQ

## How do I play a slideshow?

1. Choose either USB or TF Card for playback



2. Navigate to the folder that contains the pictures you wish to view in the slideshow.
3. Confirm selection of the first picture.
4. Press “play” in the photo menu
5. Slideshow will now play.
6. NOTE: Selecting “Repeat All” will loop slideshow.

## How do I manually control the slideshow?

1. After selecting the photo you wish to be displayed, you can press “play” to start the slideshow (as outlined in the previous FAQ).
2. To manually control the slideshow, you must stop the slideshow with the “pause” button.
3. You may use either the controls on your remote or on top of the projector itself to flip through the pictures in the current playlist.
4. You can change the SlideShow duration in the Settings Menu (Main Menu -> Settings -> Option -> Slideshow Time)

 
# Connecting to a Device via Digital AV

The M7 has a Digital AV port for ultimate connectivity flexibility. A digital AV cable is required to connect your M7 to your other device.

In the Main Menu



Select "INPUT" icon

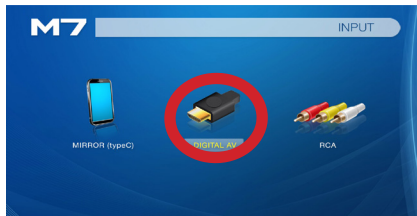

Select "Digital AV" icon

## Connectivity to Multimedia Devices

The M7 can connect to many media devices including: computers, laptops, iPhones, iPads, DVD players, smart phones, cameras, video game consoles and other peripherals with ease.

*\*Some smartphones & devices require video out capabilities and adapters to be displayed with the M7. Check with your phone manufacturer.*

# Connecting to Digital Video Input

## Step 1:

Connect one end of the Digital AV Cable to your device's Digital AV port.



## Step 2:

Connect the other end of the Digital AV Cable to your M7's Digital AV port.



## Step 3:

In the Main Menu, select the "Digital AV" Icon. Your M7 should now be mirroring the content from your device.

## Note:

If you're connecting to a computer or laptop and the projector does not automatically mirror it, read onto the next page for more information.



# Connecting to a Computer Cont.

## Step 4:

Enabling Digital Video output on your Computer – To enable Digital Video output on your computer most computers require “turning on” the video output feature. Each computer is different. Please consult your owner’s manual for instructions to enable Digital Video output. Below are standard instructions for a Windows 10 computer – not all systems are the same.

 
## Step 5:



Press Windows+P to toggle through display settings. Select either “Duplicate” or “Extend” depending on your viewing option

*\*NOTE: different operating systems may differ*

## Step 6:

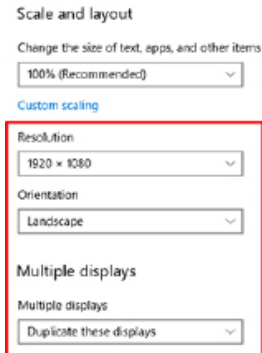

1. Right click on computer desktop and select “Screen Resolution”
2. Display Properties window will pop up
3. If a secondary monitor is grayed out, click on it and select “Extend these displays” in the “Multiple Displays” drop down
4. If the image is blurry or the text is not legible, adjust the screen resolution. We recommend 1920x1080


# Connecting to a Device via USB-C (Compatible) Display Port

 The M7 has a USB-C (compatible) Display Port for easy mirroring of devices with a USB-C Video Output. The USB-C Video Cable is required to connect your M7 to your other device.

In the Main Menu



Select "INPUT" icon

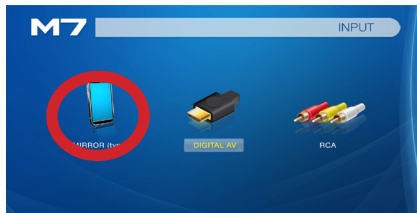

Select "Mirror" icon

## Connectivity to Multimedia Devices

The M7 can connect to many media devices including: computers, laptops, iPads, and smart phones

*\*Device requires video out capabilities through USB-C to be displayed with the M7. Check with the manufacturer.*

# Connecting to a Device via USBC (Compatible) Display Port Cont.

## Step 1:

Connect one end of the USBC Cable to your device's USBC Display Port.



## Step 2:

Connect the other end of the USBC Cable to your M7's USBC (compatible) Display Port.



## Step 3:

In the Main Menu, select the "Mirror" Icon. Your M7 should now be mirroring the content from your device.

**NOTE:** *When connected via USBC, you may experience shorter battery runtime due to the projector outputting more power in order to charge your device.*

# Connecting to Composite Video

## Step 1:

Connect the 3.5mm Composite AV Cable to the back of the M7.



## Step 2:

 
Connect the composite end of the AV Cable (Red, White, Yellow) to your device.




# Connecting to Composite Video Cont.

## Step 3:

In the Main Menu

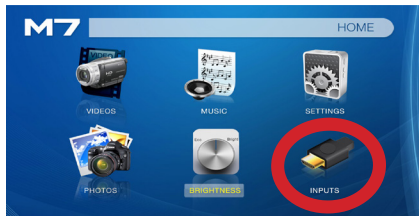

Select "INPUT" icon

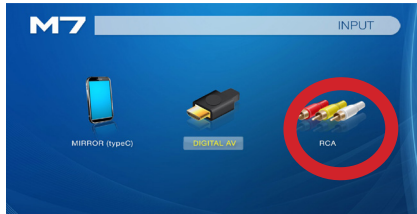 

Select "RCA"

## Step 4:

Turn on your multimedia device.

### Connectivity with multimedia devices

The M7 can connect to many media devices including: VHS players, DVD players, Blu-Ray players, cameras, video game consoles and other peripherals with ease.

# Music Player Menu

## Opening A File:

- Select the “Music” icon (Fig. 3.7).
- From the Submenu (Fig. 3.8), select the storage media with the stored files.
- Choose which file you wish to play.

Fig. 3.7


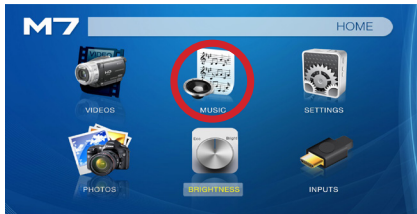 


Fig. 3.8

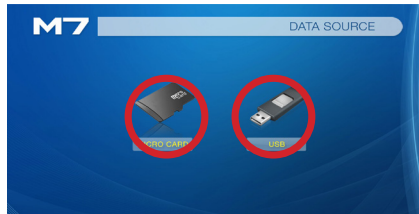 

The M7 will show all folders and supported audio files you have on your USB or TF Card drive.

Use the navigation buttons to select folders or files.

# Music Player Menu

## Listening To Audio:

To adjust the volume, use the left and right button on the projector or the volume keys on the remote. To navigate the playback menu, push the “OK” button to open the menu and use the directional buttons on the navigation pad or remote to highlight the option you wish to choose.

\*Review Specification section of this manual for supported audio formats.

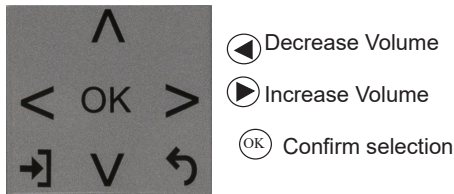 


Fig 3.9



- To open/hide the music playback menu, use the “OK” and “Back” button on the projector. Once the music playback menu is hidden, the left and right buttons will control the volume.

# Music Playback FAQ

## How do I loop a song?

1. Choose either USB or TF Card for playback



2. Navigate the folders until you reach the file you wish to play.
3. Highlight the file you want to play, then confirm the selection.
4. Move selection on music player menu to “Repeat 1,” and confirm the selection.
5. The song will now loop after playback is finished.

## How do I create a song playlist?

1. Insert your media device (either TF card or USB) into computer.
2. Make a new folder on media device (folder name will be the name of the playlist).
3. Transfer songs from computer to the new folder, name accordingly.
4. Remove media device from computer and insert into projector.
5. Navigate to Audio section, then choose appropriate media device.
6. Navigate to your playlist folder.
7. Start at first song.
8. Playback will follow each successive song on the list.

\*To create a special order for the list, add numerical numbering to the beginning of each file.



# E-Book Viewer Menu

## Opening A File:

- The E-Book Viewer is located in the Setting's Menu
- Select the "Settings" Icon
- Select the "Text Viewer" icon (Fig. 3.10)
- Choose the file you wish to play.

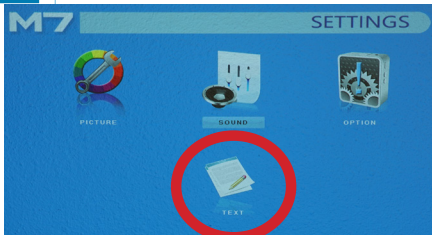 


Fig. 3.10

The M7 will show all folders and supported text files you have on your USB or TF Drives.

## Viewing Text Files:

The M7 Micro Projector allows you to view text files. Select the file you want to view in the file menu for the particular storage device on which the file is stored. You can press the left and right arrow buttons on the directional pad or remote to flip through the pages you have in the present folder.

*Note: Microsoft Office and PDF file formats are not supported. To view a slideshow convert your slideshow into JPEG pictures first.*

# Settings Menu

# Chapter 4

The Settings Menu can be accessed by selecting "Setting" on the Main Menu



Within the settings menu, there are four more submenus that allow you to customize your M7 to the settings you want.

## Picture

- Picture Mode
- Color Temperature
- Aspect Ratio
- Noise Reduction
- Screen
- Projection Direction

## Sound

- Sound Mode
- Auto Volume

## Option

- OSD Language
- Restore Factory Default
- Keystone
- Slideshow Time
- Software Version

# Picture Settings

## Picture Mode

- Changes the picture mode to different settings depending on your usage

## Color Temperature

- Adjusts the color temperature from warm to cool (red to blue)

## Aspect Ratio

 
- Changes the aspect ratio of the picture - Auto, 4:3, 16:9\*, etc.

## Noise Reduction

- Cleans up MPEG “noise” without compromising picture resolution

## Projection Direction


- Flips the projected image

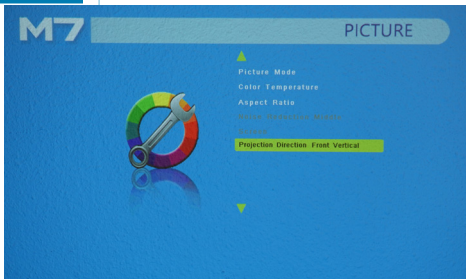

\*Caution: Some pictures may be cut off when aspect ratio is set incorrectly

\*\*Boost mode should only be used in low temperature environments with adequate clearance of exhaust / intake vents. **DO NOT block vents while operating in Boost mode.**

# Sound Settings

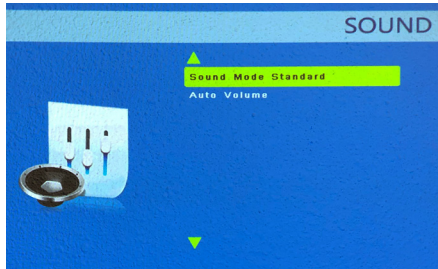 


## Sound Mode

- Changes the sound mode depending on what is currently playing

## Auto Volume

- With the Auto Volume On, the video can be opened with volume automatically
 
# Option Settings

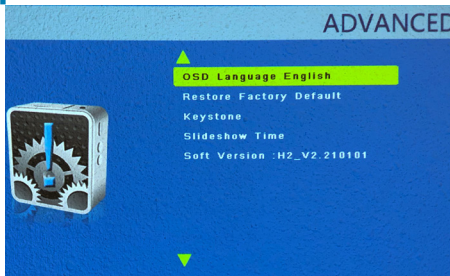

## OSD Language

- Changes the language of the device. Options include English, Spanish, Chinese, German, French

## Restore Factory Default

- Restores the projector to factory settings

## Keystone

- Allows the user to adjust keystone vertically.

## Slideshow Time

- Changes the time each slide displays when playing a slideshow

## Software Version

 
- Current software version in use

## Technical Details

### Powerbank Mode

- **Powerbank Mode**

The M7 Projector can be used as a power bank to charge your electronic devices including smart phone, tablet and so on.

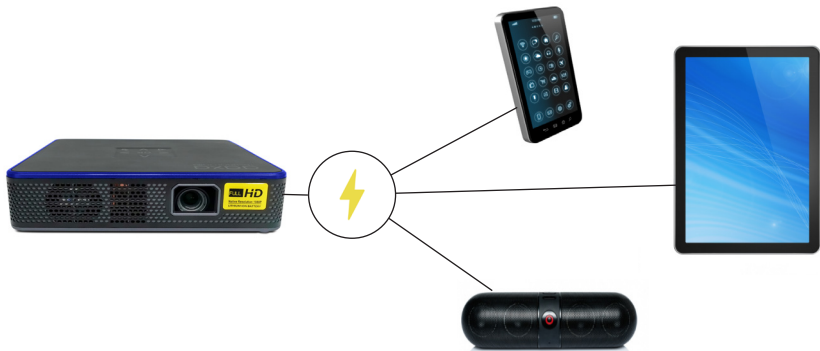


# Powerbank Mode




## How to use the Powerbank Mode:

 - Connect your device to the M7 projector through the USB port
- Find the Charge/Off/On switch at the back of the M7 projector and toggle the switch to the “Charge” position

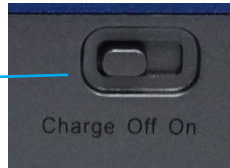

# KeyStone Adjustments

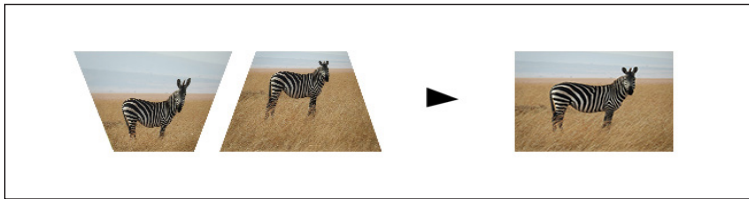 

## What is Keystoneing?

“Keystoneing” occurs when a projector is aligned non-perpendicularly to a screen, or when the projection screen has an angled surface. The image that results from one of these misalignments will look trapezoidal rather than square.

## Digital Keystone Adjustments

 
By adding a special, selectable algorithm to the scaling, some new projectors are able to alter the image before it reaches the projection lens. The result is a squared image, even at an angle.



# Keystone Adjustments

## How to Correct Keystone

- If the image looks trapezoidal with the base larger (as picture right), press the top button on the directional pad on the top of the M7 or the up button on the remote control until the keystone effect corrects and the picture turns into a square projection.
- If the image looks trapezoidal with the top larger (as pictured right), press the bottom button on the directional pad on the top of the M7 or the down button on the remote control until the keystone effect corrects and the picture turns into a square projection.

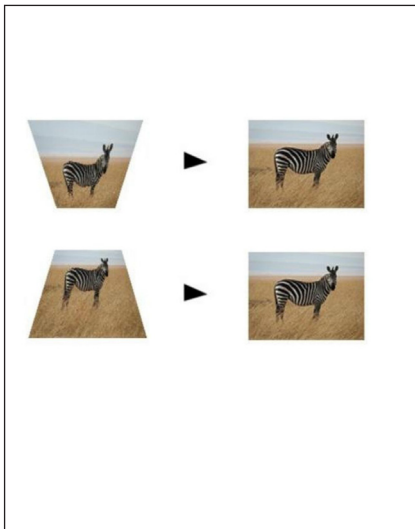

# Technical Details

## Troubleshooting

### IMAGE IS BLURRED

Possible Causes	Solution
The Projector is not in focus.	Adjust the focus with the focus adjustment buttons on the remote control until the image comes into focus, or use the focus adjustment buttons on the side of the projector
The Projector is offset from plane / angle of operation.	Move the projector so that it is both 180 degrees and on an even plane with the screen or adjust the keystone through the remote, keypad or Settings Menu

### NO SYNC, NO SIGNAL

1. Be sure to setup the computer to enable a video signal output. On some laptops this is done by pressing and holding Function F5 key. If using the M7 as an external monitor on Windows based systems, this can be done by selecting "extend my desktop to this monitor". The native resolution of the M7 projector is 1920x1080. Depending on the video driver different resolutions may need to be selected for proper output.

# Technical Details

## Troubleshooting

### THE PROJECTOR DOES NOT TURN ON

Possible Causes	Solution
There is no power.	Check to ensure the power outlet source is good. Check the power adapter to ensure a proper connection with the wall outlet as well as the projector. Confirm that the unit is charged and has enough power
Cannot power on the projector from the remote control.	To power on the projector, toggle in the Power Switch on the side of the unit to "ON". Next, if the projector is not powered on, press the Power button on the remote control.

### NO PICTURE / FILE NOT SUPPORTED

 
Possible Causes	Solution
The video source is not properly connected or selected	Check the video source signal to ensure that it is properly connected. Select the current input source by choosing the input desired from the main menu
Incorrect file extension / Video is encoded with incorrect codec	Please refer to "Specifications" page to see which file types and codex are supported. Verify that the file was encoded properly.

# Technical Details

## Troubleshooting

### Cannot Charge Smart Device / Power Bank Mode

Possible Causes	Solution
Projector is in the OFF mode.	Find the Power Switch on the back of the projector. Toggle the "Charge/ Off/ On" switch to the "ON" Position or the "Charge" Position.
The projector is in low battery.	Connect the power cord to the M7. Connect the other end of the power cord into the wall power source. Toggle the "Charge/ On/ Off" switch to the "OFF" Position. When the projector is fully charged, the LED light on the side of the projector will turn green. Allow approximately 3-4 hours to fully charge the the projector.

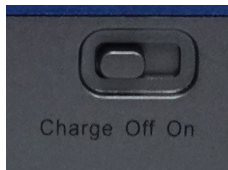

# Technical Details

## Troubleshooting

### Projector not charging

Possible Causes	Solution
There is no power.	Check to ensure the power outlet source is good. Check the power adapter to ensure a proper connection with the wall outlet as well as the projector.
The projector is not set to the "OFF" Mode.	Connect the power cord to the M7. Connect the other end of the power cord into the wall power source. Toggle the "Charge/ On/ Off" switch to the "OFF" Position. When the projector is fully charged, the LED light on the side of the projector will turn green. Allow approximately 4-5 hours to fully charge the the projector.



# Specifications

<b>Brightness (Plugged in):</b>	<b>1200 LED Lumens</b>
<b>Brightness (On Battery):</b>	<b>600 LED Lumens</b>
<b>Native Resolution:</b>	<b>1920x1080 (1080P)</b>
<b>Maximum Resolution:</b>	<b>3840x2160 (4K 30 FPS)</b>
<b>Contrast Ratio:</b>	<b>2000:1</b>
<b>Aspect Ratio:</b>	<b>16:9</b>
<b>Keystone:</b>	<b>Vertical</b>
<b>Projection Lens:</b>	<b>Electric Focus</b>
<b>Image Size:</b>	<b>16 - 200 inches</b>
<b>Lightsource:</b>	<b>Osram 30,000 Hour LEDs Quad Cast LEDs</b>
<b>Color:</b>	<b>Black/Gray</b>
<b>Video In:</b>	<b>Composite A/V (3.5 mm jack), Digital AV (Compatible with Full Size HDMI™), 4K 30 FPS</b>
<b>Audio Output:</b>	<b>4W High-Low Frequency Speaker, 3.5 mm Audio Jack</b>
<b>Throw Ratio:</b>	<b>1.2:1</b>
<b>TF Card:</b>	<b>TF Card Slot (64GB maximum)</b>
<b>USB:</b>	<b>USB 2.0 (Full Size - 64GB maximum), Type C Compatible</b>
<b>Dimensions:</b>	<b>7.3" x 6.4" x 1.85"</b>
<b>Weight:</b>	<b>2.99 lbs</b>
<b>Supported File Formats:</b>	<b>MP3, WMA, OGG, WAV, JPG, AVI, BMP, GIF, JPG, TXT</b>
<b>Battery Runtime (Eco):</b>	<b>3 Hours</b>
<b>Battery Runtime (Standard):</b>	<b>2.1 Hours</b>



# Notes

---

---

---

---

---

---

---

 
---

---

---

---

# aaxa TECHNOLOGIES

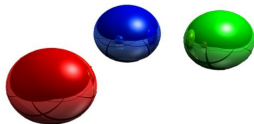

Please direct all customer service inquiries to:

AAXA Technologies, Inc.  
17781 Sky Park Cir., Suite #F  
Irvine, CA 92614  
(714) 957-1999  
[info@aaxatech.com](mailto:info@aaxatech.com)